 


iléktró

QUICK START GUIDE

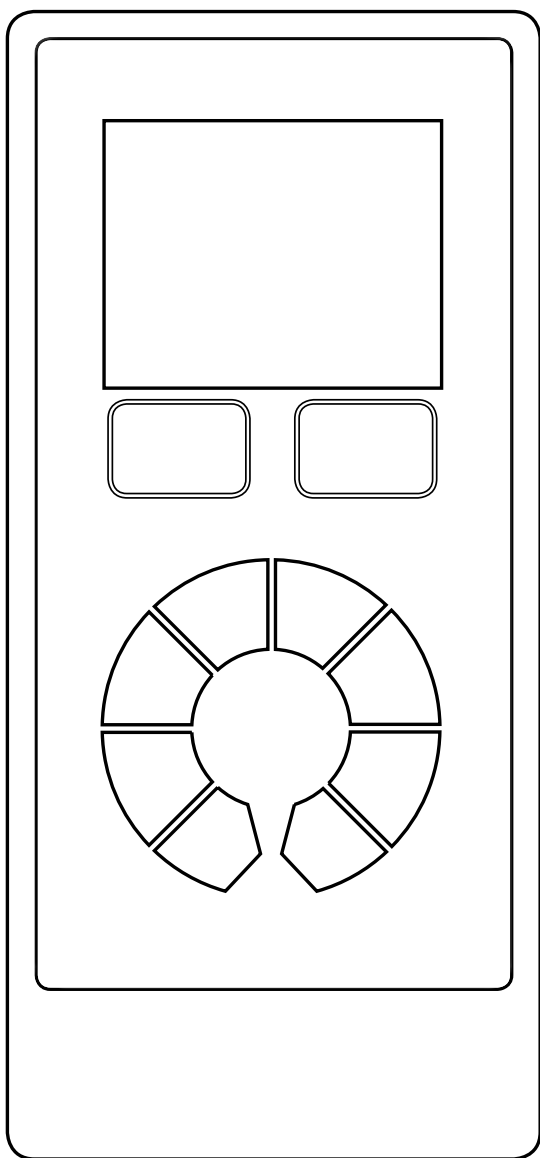

PAUL AGNEW

DESIGNS

IMPORTANT

THIS DOCUMENT IS FOR STARTING
GUIDELINES ONLY

PLEASE READ THE FULL INSTRUCTION
MANUAL

THE HEATER OUTLET GRILLE BECOMES
VERY HOT WHILST IN OPERATION.

DO NOT COVER THE OUTLET GRILLE OR
ANY PART OF THE APPLIANCE.

FOR USE WITH 230V - 240V 50HZ
ELECTRICITY SUPPLY ONLY.

PLEASE READ THE FULL INSTRUCTIONS
CAREFULLY BEFORE INSTALLATION

KEEP THE INSTRUCTIONS IN A SAFE
PLACE.

THEY WILL BE NEEDED WHEN
MAINTENANCE OR SERVICING IS
REQUIRED.

THIS APPLIANCE MUST BE EARTHED

THIS GUIDE COVERS THE FOLLOWING
MODELS ONLY:

750L, 750A, 750S, 950L, 950A 950S
1250 L, 1250S, 1650 L, 2000 L

 
A - ASPECT

L - LANDSCAPE

S - SUITE

**HOW TO USE YOUR APPLIANCE
OPERATING INSTRUCTIONS**

**- WARNING -
PARTS OF THE PRODUCT
MAY GET HOT DURING
OPERATION**

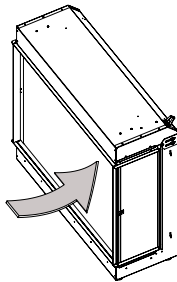

TO TURN THE APPLIANCE ON I/O OPERATE THE STANDBY SWITCH LOCATED ON THE RIGHT HAND SIDE UNDER THE FRONT TRIM, HERE ON YOUR APPLIANCE:

THE FLAME EFFECT CAN BE TURNED ON/OFF USING THE REMOTE. WHEN THE FLAME EFFECT IS OFF THE APPLIANCE REMAINS IN STANDBY. THE APPLIANCE CAN BE OPERATED BY THE RADIO FREQUENCY HANDSET ONLY.

 
THE FOLLOWING FUNCTIONS CAN BE CONTROLLED USING THE REMOTE HANDSET:

- ON/OFF - FLAME EFFECT
- HEAT SETTINGS
- BRIGHTNESS OF THE FUEL AND FLAME EFFECT
- FLAME DUO COLOUR
- FUEL BED COLOUR
- THE FLAME EFFECT CAN BE TURNED OFF USING THE REMOTE,
- RETURNING THE APPLIANCE TO STANDBY.

TURNING ON THE APPLIANCE


IF YOU DO NOT USE THE APPLIANCE AND HANDSET FOR 2 MINUTES THE HANDSET WILL GO INTO SLEEP MODE. PRESS THE POWER BUTTON TO REACTIVATE.

TURN THE APPLIANCE ON AND OFF BY USING THE REMOTE HANDSET. PRESS THE POWER BUTTON TO EXIT SLEEP MODE. ONCE OUT OF SLEEP MODE PRESS THE POWER BUTTON AGAIN TO TURN ON.

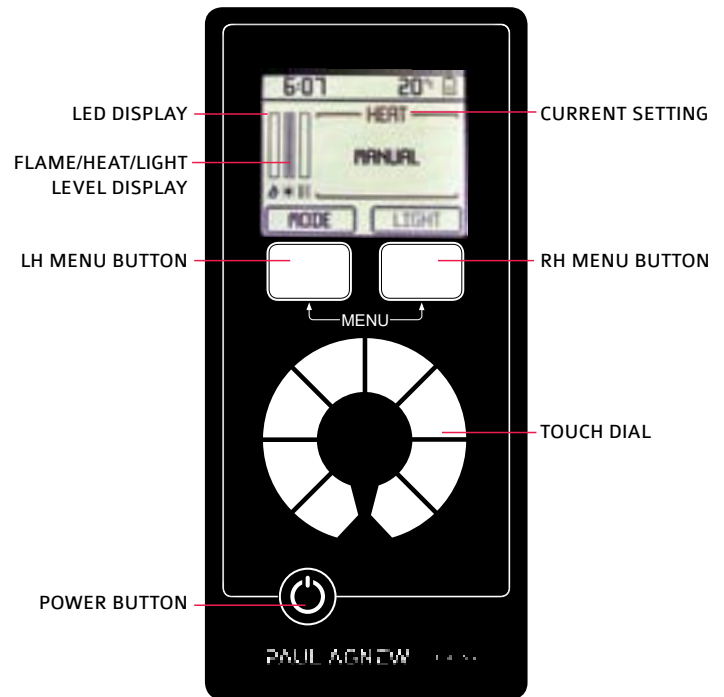

**CONTROLLING THE APPLIANCE
PRESS THE MENU BUTTONS TO SELECT THE
MODES YOU WANT TO CONTROL
HEAT - LIGHT - FLAME - EFFECT**

 **TO ADJUST THE FLAME BRIGHTNESS
ENSURE 'LIGHT' SETTING IS SELECTED.**

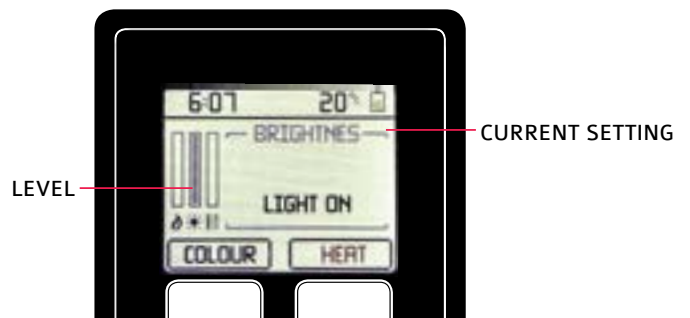

ROTATE FINGER ON THE TOUCH DIAL
ROTATE CLOCKWISE TO INCREASE
ROTATE ANTI CLOCKWISE TO DECREASE



 
**HOW TO USE YOUR APPLIANCE
OPERATING INSTRUCTIONS**

TO ADJUST THE LIGHT EFFECT



SELECT 'EFFECT' SETTING WHILE IN LIGHT MODE.
THE LH MENU BUTTON WILL SWITCH THE EFFECT ON.
ROTATING THE DIAL OR PRESSING THE MENU BUTTONS WILL EXIT THE EFFECT MODE. THE EFFECT MODE IS INDICATED BY A DASHED BAR, THE LIGHT LEVEL IS INDICATED BY A SOLID BAR.

TO ADJUST THE FUEL AND FLAME COLOUR

PRESS THE LH MENU BUTTON TO SELECT THE COLOUR OPTION

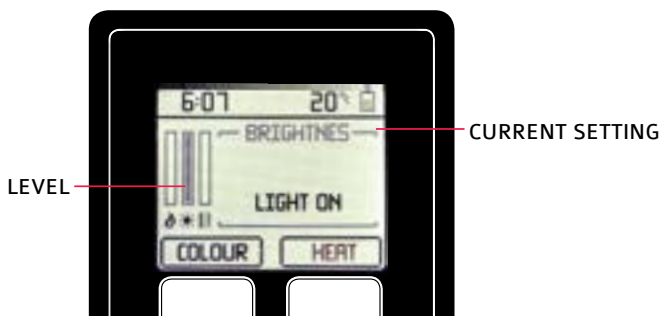


  ROTATE THE TOUCH DIAL TO CHOOSE YOUR COLOUR

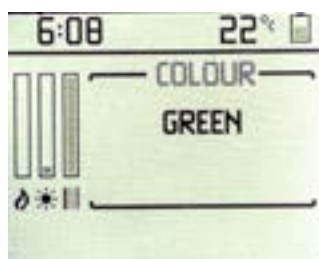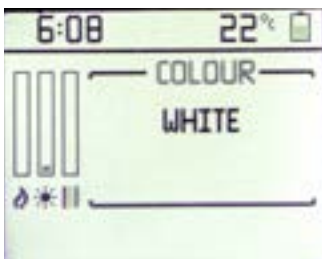


HEAT SETTINGS

 PRESS THE RH MENU BUTTON TO SELECT THE HEAT CONTROL

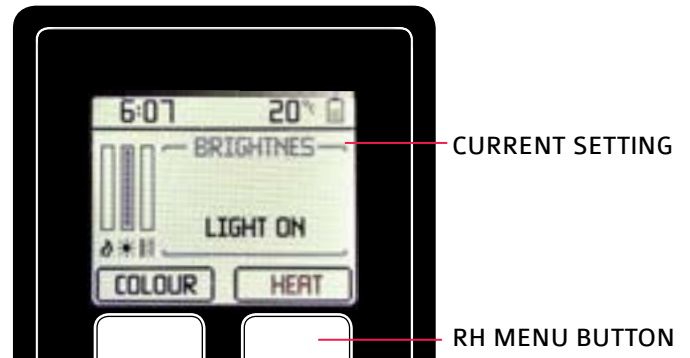

PRESS THE LH MENU BUTTON TO SWITCH BETWEEN THE 3 MODES:

 - MODE 1 MANUAL
- MODE 2 THERMOSTATIC
- MODE 3 7 DAY TIMER

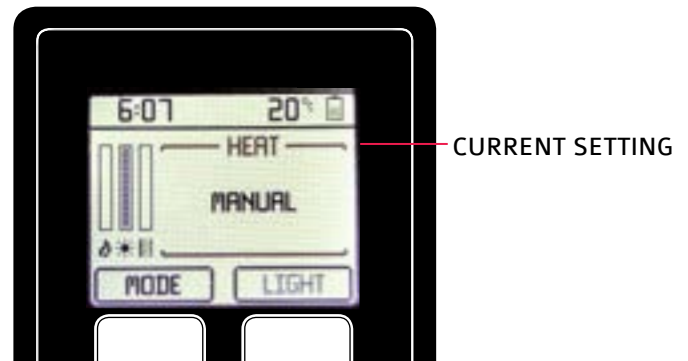

MANUAL MODE

THE HEAT SETTING IS INDICATED BY A RED BAR. ADJUST HEAT BY ROTATING FINGER ON THE TOUCH DIAL. CLOCKWISE INCREASES THE TEMPERATURE AND ANTI CLOCKWISE DECREASES THE TEMPERATURE UNTIL HEAT IS TURNED OFF.

THERMOSTATIC MODE

WHEN SET IN THERMOSTATIC MODE JUST A TEMPERATURE IS DISPLAYED ON SCREEN. ROTATE TOUCH DIAL CLOCKWISE TO INCREASE TEMPERATURE SETTING AND ANTI-CLOCKWISE TO DECREASE TEMPERATURE SETTING. THE HEATER WILL AUTOMATICALLY MAINTAIN THE SET TEMPERATURE.

7 DAY TIMER

IN 7 DAY TIMER MODE THE CURRENT TEMPERATURE AND THE NEXT TIME AND TEMPERATURE ,IS DISPLAYED, SEE MENU SETTINGS.



TRIDENT HOUSE
1 TOWER ROAD BUSINESS PARK
DARWEN, BB3 2DU
CONTENT © F2 FIRES UK LTD 2019